

CATALOG OF REPLACEMENT PARTS




ELECTRIC CONVECTION OVENS

WKE	ML-126755
WKED	ML-126756
WKEC	ML-126757
WKEX	ML-126758
WKEDX	ML-126759
WKECX	ML-126760
WLEO	ML-136825




WKED-2

For additional information on Wolf Range or to locate an authorized parts and service provider in your area, visit our website at www.wolfrange.com




OVEN (LH SIDE)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56206-A1			
1	00-424141-00002	Top (SST) (WKE, WKED, WKEC)	1
2	00-424229-00002	Top (SST) (WKEX, WKEDX, WKECX)	1
	00-424141-00003	Top (Aluminized) (WLEO)	1
3	00-421799-00001	Top – Front	1
	00-957607-00001	Top – Front (SST) (WLEO)	1
4	00-339337-00001	Stud – Locating (With Stacking Kit Only)	2
5	00-353484-00001	Plate – Retainer	2
6	SC-053-46	Mach. Screw 1/4-20 x 3/4 Truss Hd. (SST)	4
7	NS-038-08	Lock Nut 1/4-20 x 1 Hex Hd.	4
8	00-347080-00002	Bearing – Door Shaft	2
9	00-353482-00001	Spacer	2
10	00-353483-00001	Plate – Upper Door Bearing	2
11	00-499302-00001	Panel – Outer (SST) (LH) (WKE, WKED, WKEC) (New Style)	1
	00-499302-00002	Panel – Outer (Aluminized) (LH) (WLEO)	1
	00-424142-00002	Panel – Outer (SST) (LH) (WKE, WKED, WKEC) (Old Style)	1
12	00-499303-00001	Panel – Outer (SST) (LH) (WKEX, WKEDX, WKECX) (New Style)	1
	00-424230-00002	Panel – Outer (SST) (LH) (WKEX, WKEDX, WKECX) (Old Style)	1
13	00-423842-000G1	Seal – Vertical Door (LH & RH)	1
14	00-342141-00001	Rack – Support (LH) (WKE, WKED, WKEC)	1
15	00-342141-00002	Rack – Support (RH) (WKE, WKED, WKEC)	1
16	00-424833-00001	Rack – Support (LH) (WKEX, WKEDX, WKECX)	1
17	00-424833-00002	Rack – Support (RH) (WKEX, WKEDX, WKECX)	1
18	00-426648-000G1	Cavity – Side Assy. (LH) (WKE, WKED, WKEC)	1
19	00-426920-000G1	Cavity – Side Assy. (LH) (Porcelain) (WKEX, WKEDX, WKECX)	1
20	00-426648-000G2	Cavity – Side Assy. (RH) (WKE, WKED, WKEC)	1
21	00-426920-000G2	Cavity – Side Assy. (RH) (Porcelain) (WKEX, WKEDX, WKECX)	1
22	00-499299-000G1	Trim – Bottom (W/Access Door) (New Style) (Incls. Items 23 & 24)	1
	00-957608-00002	Trim – Bottom (W/Access Door) (WLEO)	1
	00-423766-000G1	Trim – Bottom (W/Access Door) (Old Style) (Incls. Items 23 Old Style & 24)	1
23	00-499297-00001	Access Door (New Style)	1
	00-423758-00001	Access Door (Old Style)	1
24	00-425199-00001	Fastener – Nylon (Push-In)	2
25	00-424865-00001	Cover – Trim	1
26	00-357507-00001	Seal – Horizontal Door (30 1/2 Lg.) (Top or Bottom)	2
27	SC-115-51	Mach. Screw 10-32 x 1/2 Phil. Truss Hd.	4
28	00-497585-00001	Strike Plate (New Style) (Mounted on Upper “C” Channel)	2
	00-347545-00001	Roller Ball Door Latch (Old Style)	2
	00-423847-00001	Strike Plate (Old Design) (Mounted to Doors)	2
29	00-423848-00001	Shim – Door Strike (Old Style)	AR
30	NS-038-03	Lock Nut Special 10-32	4
31	00-425433-00001	Fan – Clip	1
32	00-424940-00002	Fan – Cooling (230 V.)	1
	00-346357-00001	Thermostat – Hi Limit (Thermodisc)	1
	00-357919-00001	Flexible Door Seal Kit (Incls. Items 13 & 26)	1

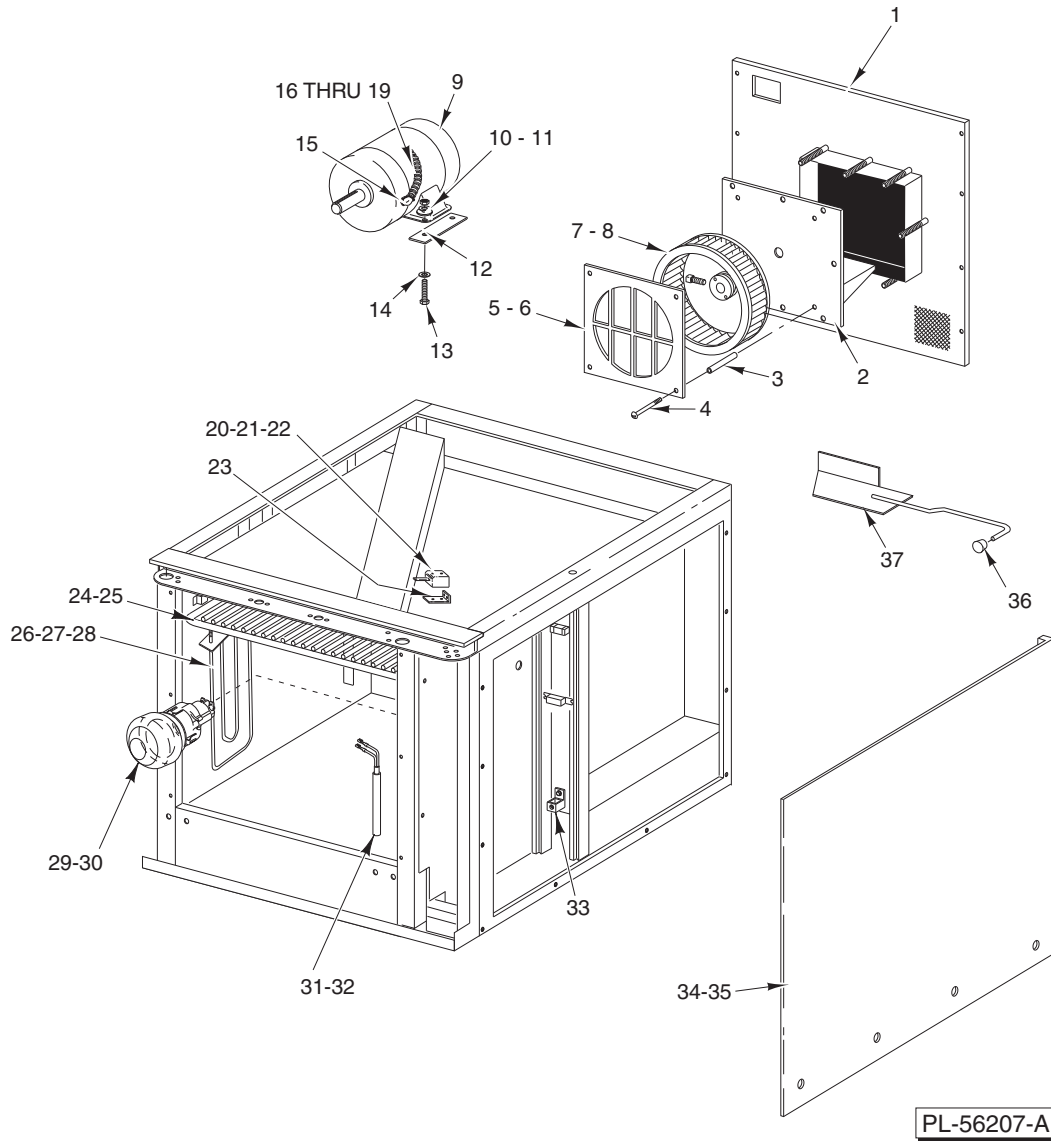


**OVEN
(RH SIDE)**

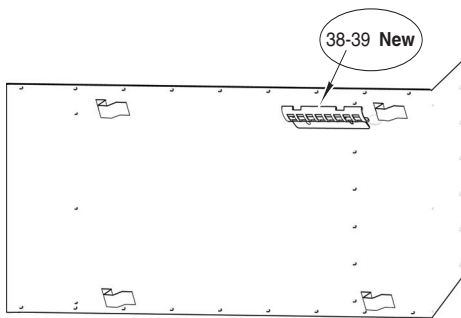

RH CAVITY SIDE

OVEN (RH SIDE)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56207-A			
1	00-426839-000G1	Back – Panel Assy.	1
2	00-423289-000G1	Motor Mount	1
3	00-411289-00004	Spacer – Fan Housing.....	4
4	SC-120-15	Mach. Screw 1/4-20 x 4 Rd. Hd.	4
5	00-411136-00004	Cover – Fan (60 Hz.)	1
6	00-411136-00003	Cover – Fan (50 Hz.)	1
7	00-415780-00003	Wheel – Blower (60 Hz.)	1
8	00-415780-00005	Wheel – Blower (50 Hz.)	1
9	00-358516-00002	Motor 1/2 Hp. (2 Speed) (240 V., 50/60 Hz.)	1
10	WS-029-46	Washer	4
11	NS-046-86	Nut Assy. 5/16-18 KEPS Hex	4
12	00-358723-00001	Spacer – Steel	2
13	SC-113-65	Cap Screw 5/16-18 x 1 1/4 Hex Hd.	4
14	WS-029-46	Washer	4
15	FE-002-52	Connector – Conduit 3/8 TS (90 Deg.)	1
16	FE-006-05	Lock Nut 1/2	1
17	00-414540-00B35	Conduit 3/8 x 35 Lg.	1
18	00-342285-00001	Bushing – Plastic	2
19	FE-002-03	Connector – Conduit 3/8 TS Straight	1
20	00-411496-000F1	Switch – Micro	1
21	NS-038-08	Lock Nut 1/4-20 Hex	2
22	WS-029-49	Washer	2
23	00-425324-00001	Bracket – Door Switch	1
24	00-411265-00011	Rack Assy. (WKE, WKED, WKEC)	AR
25	00-411265-00010	Rack Assy. (WKEX, WKEDX, WKECX)	AR
26	00-426635-00001	Element – (2000 W.) (208 V.)	6
27	00-426635-00002	Element – (2000 W.) (240 V.)	6
28	00-426635-00003	Element – (2000 W.) (480 V.)	6
29	00-357036-00002	Oven Lamp (40 W.) (250 V.)	2
30	00-357036-00003	Oven Lamp Lens (Glass)	2
31	00-353589-00001	Probe (WKED, WKEDX)	1
32	00-920883-00003	Probe (WKEC, WKECX)	1
33	00-417856-00001	Lug – Grounding (With Set Screw)	1
34	00-424140-00002	Panel – Outer (RH) (SST) (WKE, WKED, WKEC)	1
	00-424140-00005	Panel – Outer (RH) (Aluminized) (WLEO)	1
35	00-424228-00002	Panel – Outer (RH) (SST) (WKEX, WKEDX, WKECX)	1
36	00-341564-00003	Handle	1
37	00-426804-000G1	Vent Slide Assy. (Incls. Item 36)	1
38	00-499278-00001	Probe Guard (New Style)	1
39	SD-032-07	Screw, 10-24 x 1/2 Hex Hd.	2
	00-355154-00002	Pan – Drip (WKE, WKED, WKEC)	1
	00-355154-00004	Pan – Drip (WKEX, WKEDX, WKECX)	1
	00-423832-00001	Cover – Light (Metal)	2

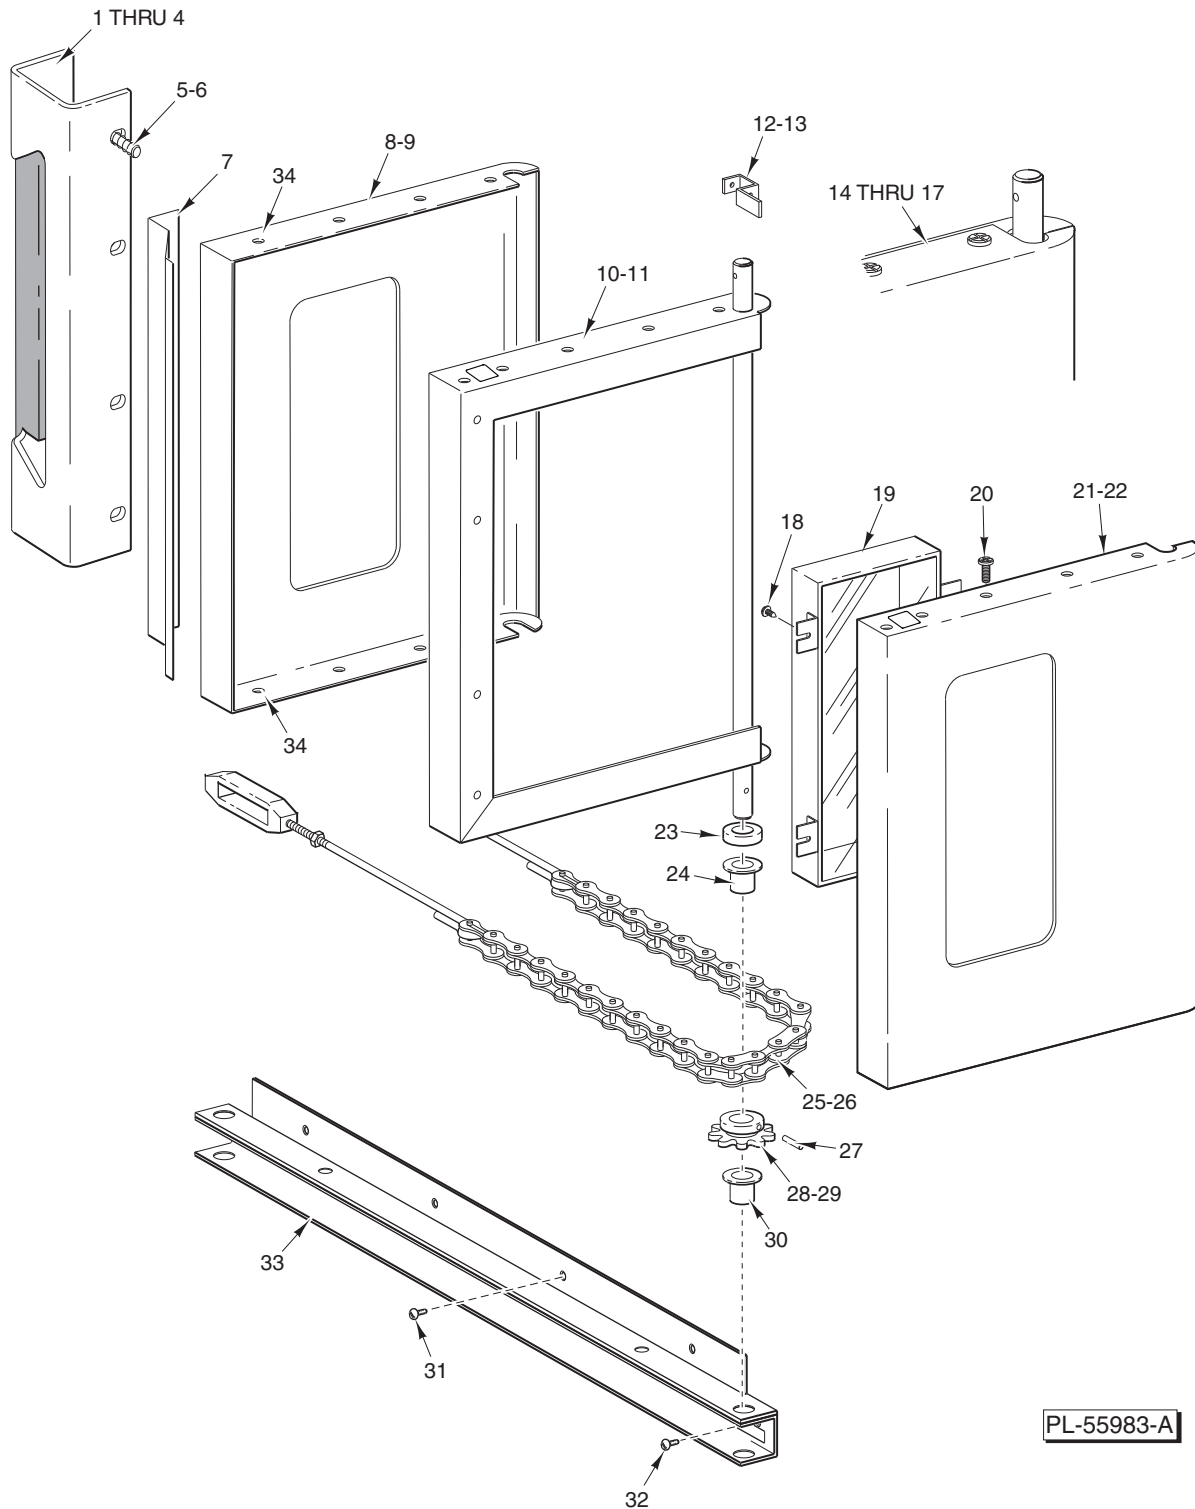


PL-55983-A

**DOOR ASSEMBLY
(SIMULTANEOUSLY OPENING DOORS)**

DOOR ASSEMBLY (SIMULTANEOUSLY OPENING DOORS)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55983-A			
1	00-356562-00001	Handle – Door	1
2	00-356563-00001	Grip – Front	1
3	00-356563-00002	Grip – Rear	1
4	SC-113-98	Mach. Screw 10-24 x 1/2 Hex Washer Hd.	3
5	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	4
6	WL-019-37	Lockwasher 1/4 Light	4
7	00-356550-00001	Latch – Friction	1
8	00-421913-00002	Shell – Outer Door (RH) (W/O Window)	1
	00-421913-00004	Shell – Outer Door (LH) (W/O Window)	1
9	00-421913-00001	Shell – Outer Door (RH) (W/Window)	1
	00-421913-00003	Shell – Outer Door (LH) (W/Window)	1
10	00-421904-000G1	Frame Assy. – Door (LH)	1
11	00-421905-000G1	Frame Assy. – Door (RH)	1
12	00-424163-00001	Lever – Door Switch	1
13	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
14	00-499289-000G1	Door Assy. (LH) (W/Window) (Chain Doors) (New Style)	1
	00-424730-00001	Door Assy. (LH) (W/Window) (Chain Doors) (Old Style)	1
15	00-499289-000G2	Door Assy. (LH) (W/O Window) (Chain Doors) (New Style)	1
	00-424730-00002	Door Assy. (LH) (W/O Window) (Chain Doors) (Old Style)	1
16	00-499290-000G1	Door Assy. (RH) (W/Window) (Chain Doors) (New Style)	1
	00-424731-00001	Door Assy. (RH) (W/Window) (Chain Doors) (Old Style)	1
17	00-499290-000G2	Door Assy. (RH) (W/O Window) (Chain Doors) (New Style)	1
	00-424731-00002	Door Assy. (RH) (W/O Window) (Chain Doors) (Old Style)	1
18	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
19	00-358534-00001	Window Assy.	1
20	SD-034-22	Mach. Screw 10-32 x 1/2 Phil. Pan Hd.	9
21	00-358532-00001	Shell – Inner Door (RH & LH) (W/Window)	1
22	00-358533-00003	Shell – Inner Door (RH & LH) (W/O Window)	1
23	00-343143-00002	Washer	2
24	00-347080-00002	Bearing – Door Shaft	2
25	00-343608-00002	Door Chain & Turnbuckle Assy.	2
26	00-352667-00001	Cable – Door Stop	1
27	PS-004-11	Spiral Pin 3/16 x 1 1/4 Heavy	2
28	00-342166-00001	Sprocket – Door Shaft	2
29	SC-047-28	Set Screw 1/4-28 x 3/8 Hex Hdls., Cup Pt.	2
30	00-347080-00002	Bearing – Door Shaft	2
31	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.	4
32	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
33	00-499300-000G1	Channel – Door Sill Weldment (New Style)	1
	00-357846-00001	Channel – Door Sill Weldment (Old Style)	1
34	SC-117-73	Mach. Screw 10-32 x 5/8	2

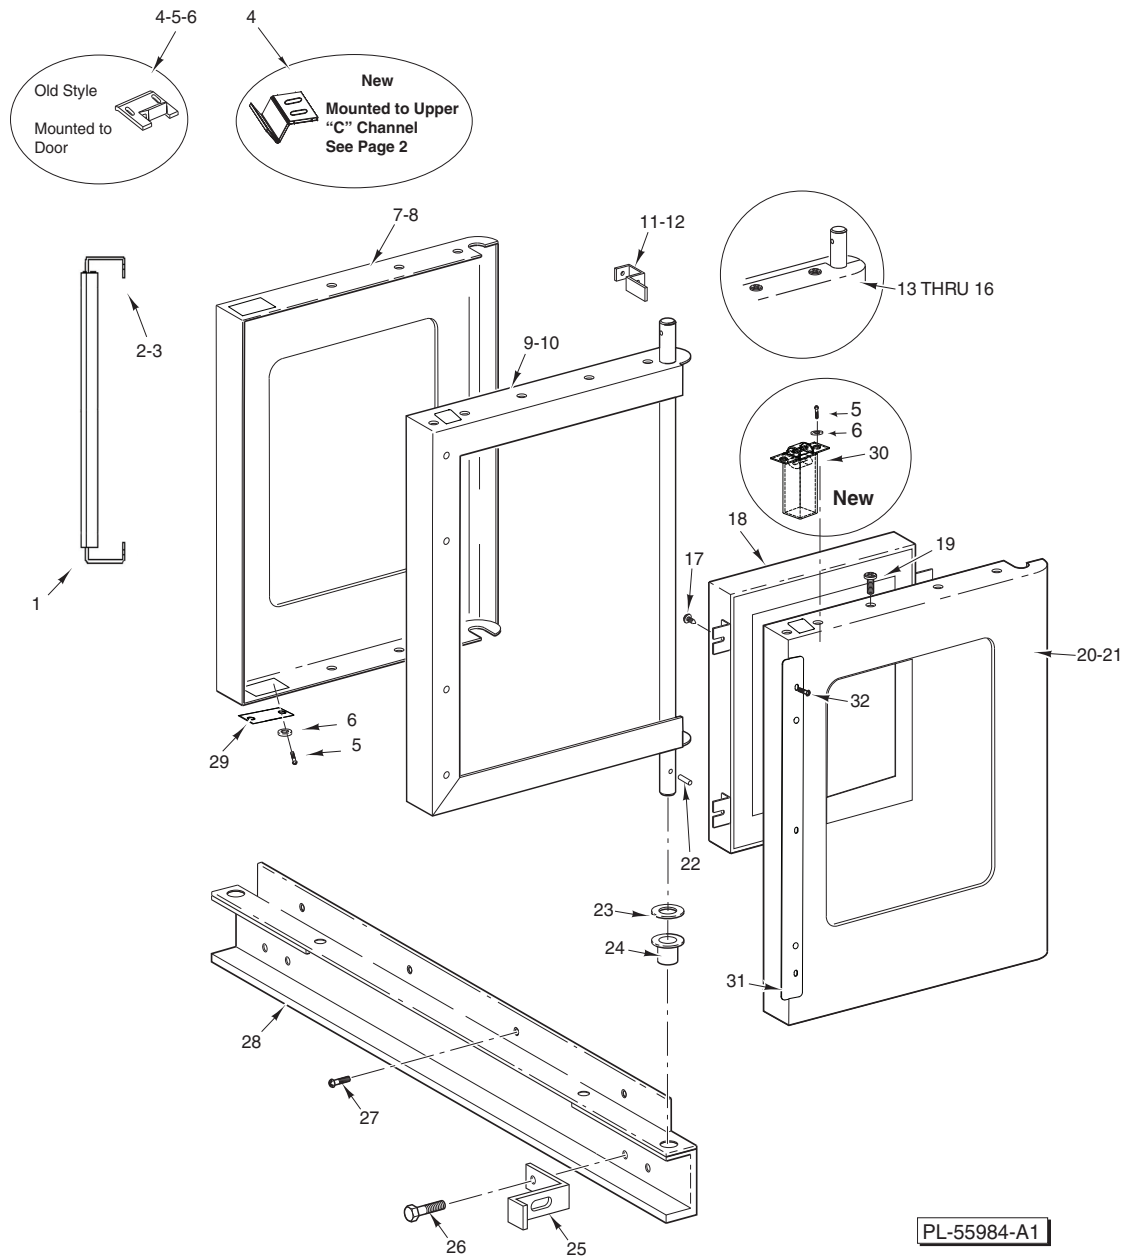


DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS)

DOOR ASSEMBLY (INDEPENDENTLY OPENING DOORS)


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55984-A1			
1	00-357929-00001	Handle – Door (Black)	1
2	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	2
3	WL-019-37	Lockwasher 1/4 Light	2
4	00-497585-00001	Strike Plate (New Style) (Attaches to Upper “C” Channel) (See Pg. 2)	2
	00-423847-00001	Strike – Door (Old Style) (Mounted on Door)	1
5	SC-117-73	Screw	4
6	WL-019-35	Lockwasher	4
7	00-358600-00001	Shell – Outer Door (RH & LH) (W/Window)	1
8	00-358600-00002	Shell – Outer Door (RH & LH) (W/O Window)	1
9	00-421905-000G1	Frame Assy. – Door (RH)	1
10	00-421904-000G1	Frame Assy. – Door (LH)	1
11	00-424163-00001	Lever – Door Switch	1
12	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
13	00-499285-000G1	Door Assy. (LH) (W/Window) (Independent Doors) (New Style)	1
	00-358529-00005	Door Assy. (LH) (W/Window) (Independent Doors) (Old Style)	1
14	00-499285-000G2	Door Assy. (LH) (W/O Window) (Independent Doors) (New Style)	1
	00-358529-00006	Door Assy. (LH) (W/O Window) (Independent Doors) (Old Style)	1
15	00-499286-000G1	Door Assy. (RH) (W/Window) (Independent Doors) (New Style)	1
	00-358530-00003	Door Assy. (RH) (W/Window) (Independent Doors) (Old Style)	1
16	00-499286-000G2	Door Assy. (RH) (W/O Window) (Independent Doors) (New Style)	1
	00-358530-00004	Door Assy. (RH) (W/O Window) (Independent Doors) (Old Style)	1
17	SD-034-62	Self-Tapping Screw 10-32 x 1/2 Hex Washer Hd., Type T	4
18	00-358534-00001	Window Assy.	1
19	SD-034-22	Mach. Screw 10-32 x 1/2 Phil. Pan Hd.	8
20	00-358532-00001	Shell – Inner Door (RH & LH) (W/Window)	1
21	00-358533-00003	Shell – Inner Door (RH & LH) (W/O Window)	1
22	PS-004-11	Spiral Pin 3/16 x 1 1/4 Heavy	1
23	00-347080-00002	Bearing – Door Shaft	1
24	00-343143-00002	Washer	2
25	00-499263-00001	Door Stop (New Style)	1
	00-424158-00001	Door Stop (Old Style)	1
26	SC-113-90	Mach. Screw 1/4-20 x 3/4 Hex Hd.	2
27	SC-022-40	Mach. Screw 1/4-20 x 3/4 Phil. Flat Hd.	4
28	00-499262-00001	Channel – Door Sill Weldment (New Style)	1
	00-357846-00001	Channel – Door Sill Weldment (Old Style)	1
29	00-499264-00001	Cover, Cutout	1
30	00-497586-00001	Roller Latch (New Style)	2
	00-347545-00001	Roller Ball Door Latch (Old Style) (Mounted on “C” Channel)	1
31	00-357837-00001	Door End Seal (LH Door)	1
32	SC-113-78	Mach. Screw	3
	00-423848-00001	Shim – Door Strike	AR

NOTE: When ordering items 7 or 8 for an old style oven, 2 of part 499264-1, 4 of part SC-117-73 and 4 of part WL-019-35 are also needed.

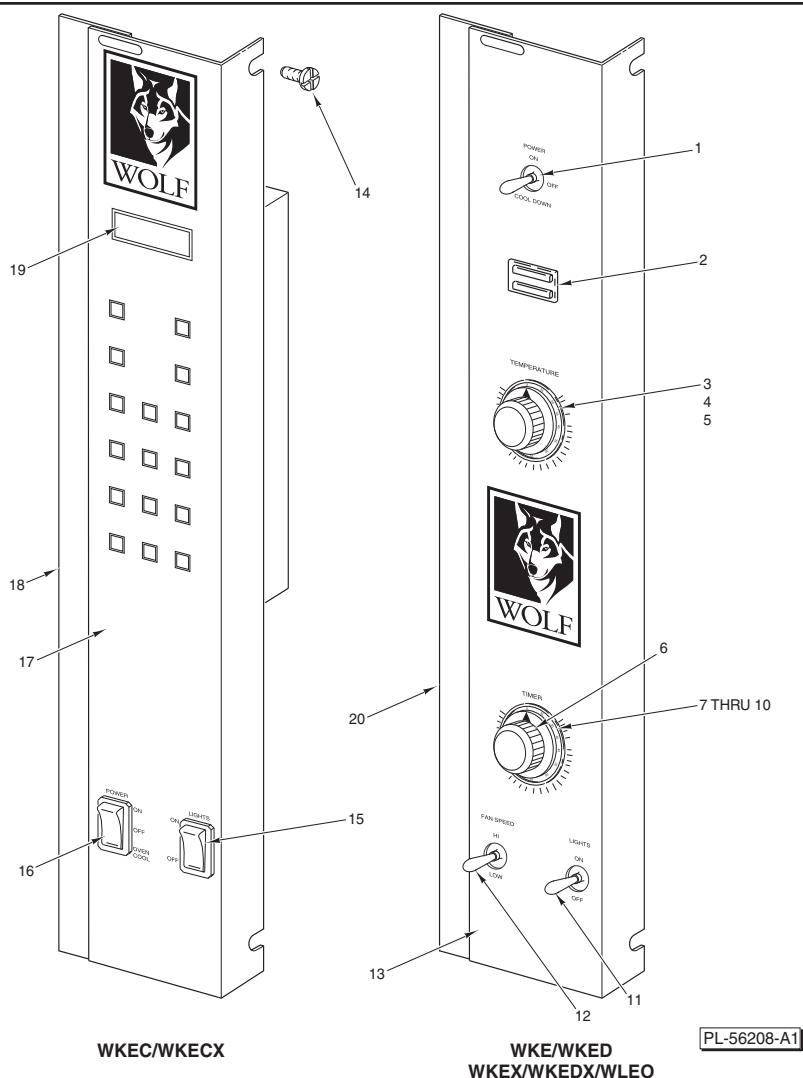

CONTROL PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56208-A1			
1	00-340324-00008	Switch (Hold)	1
2	00-354575-00001	Light – Indicator (On/Heat) (200-240 V.)	1
3	00-411242-00001	Knob	1
4	00-353613-00002	Controller – Temperature (SS) (500 Deg.) (WKED, WKEDX)	1
5	00-411506-00003	Thermostat (Prior to 02/2001) (WKE, WKEX)	1
6	00-411242-00001	Knob	1
7	00-411690-00002	Timer (240 V.) (1 Hr.) (60 Hz.)	1
8	00-411690-00004	Timer (240 V.) (5 Hr.) (60 Hz.)	1
9	00-411690-00005	Timer (240 V.) (1 Hr.) (50 Hz.)	1
10	00-411690-00006	Timer (240 V.) (5 Hr.) (50 Hz.)	1
11	00-340324-00012	Switch (S.P.S.T.)	1
12	00-340324-00009	Switch (D.P.D.T.)	1
13	00-426826-00001	Overlay – Panel (WKE, WKEX)	1
	00-426857-00001	Overlay – Panel (WKED, WKEDX)	1
14	SD-037-02	Self-Tapping Screw 10-16 x 1/2 Hex Washer Hd., Type AB	3
15	00-358628-00002	Switch – Rocker (2 Position)	1
16	00-358628-00001	Switch – Rocker (3 Position)	1
17	00-426931-00001	Overlay – Control Panel	1
18	00-499301-000G1	Panel – Control Weldment	1
19	00-424846-00001	Controller (Watlow #734)	1
20	00-499296-000G1	Panel – Control Weldment (WKE, WKED, WKEX, WKEDX)	1
	00-411499-00003	Buzzer (230 V.)	1
	00-423918-00001	Electronic Beeper	1

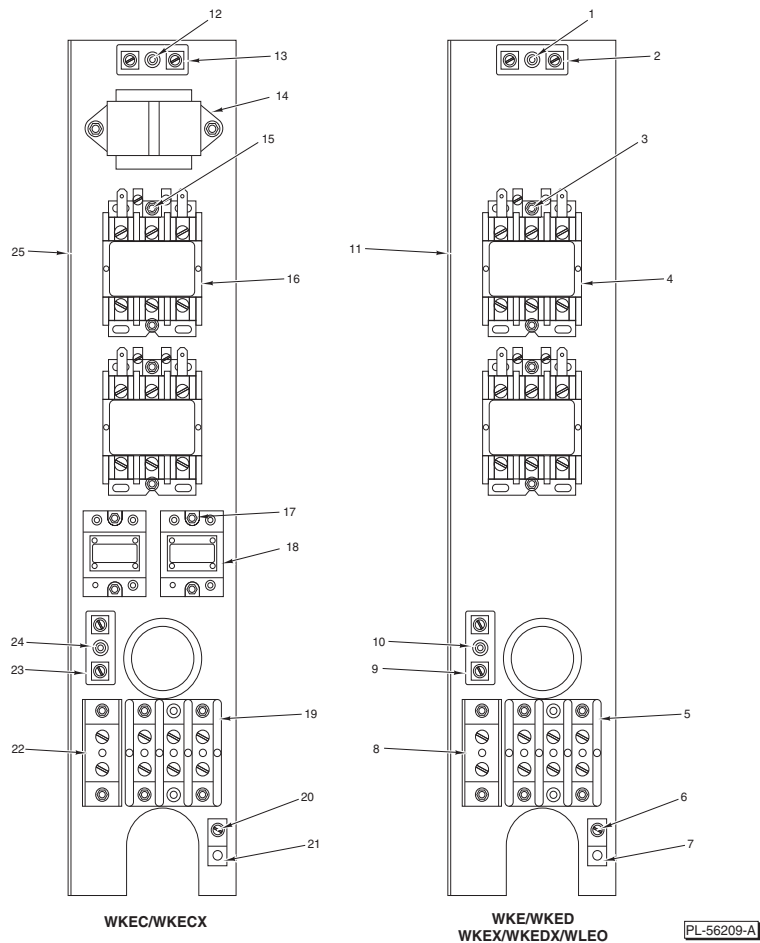

ELECTRICAL COMPONENT PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-56209-A			
1	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
2	00-417934-000G1	Block – Porcelain Assy.	1
3	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	4
4	00-411497-000C5	Contactor (3 Pole)	2
5	00-410472-00008	Terminal Block	1
6	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	1
7	00-417856-00001	Lug – Grounding (With Set Screw)	1
8	00-410472-00009	Block – Terminal (1 Pole)	1
9	00-417934-000G1	Porcelain – Block Assy.	1
10	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
11	00-422155-00001	Component Panel	1
12	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
13	00-417934-000G1	Porcelain – Block Assy.	1
14	00-421758-000G2	Transformer (208-240 V.)	1
15	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	4
16	00-411497-000C5	Contactor (3 Pole)	2
17	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	4
18	00-821875-00002	Relay – Solid State (50 Amp.)	2
19	00-410472-00008	Terminal Block	1
20	SD-032-07	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type TT	1
21	00-417856-00001	Lug – Grounding (With Set Screw)	1
22	00-410472-00009	Block – Terminal (1 Pole)	1
23	00-417934-000G1	Porcelain – Block Assy.	1
24	SD-034-52	Self-Tapping Screw 8-32 x 1 Hex Washer Hd., Type T	1
25	00-422155-00001	Component Panel	1
	00-411500-00015	Transformer (480V-240V)	1
	00-427081-00001	Mounting Bracket (480V Transformer)	1
	00-427082-00001	Cover (480V Transformer)	1

RECOMMENDED SPARE PARTS

PART NO.	NAME OF PART	AMT.
00-353589-00001	Probe (D-Model)	1
00-340324-00009	DPDT Switch Fan Speed Toggle	1
00-340324-00012	SPST Switch Lights Toggle	1
00-358628-00002	Rocker Switch Lights	1
00-424940-00002	Cooling Fan (240V)	1
00-353613-00002	Temperature Control D-Model	1
00-411242-00001	Control Knob	1
00-411690-00002	Timer (1 Hr) (240V)	1
00-411499-00003	Buzzer	1
00-411496-000F1	Door Switch	1
00-346357-00001	High Limit	1
00-411497-000C5	Contactor (3-Pole)	1
00-340324-00008	Toggle Switch, ON/OFF	1
00-411500-00013	Transformer (240V/24V) (40VA)	1
FE-023-55	Fuse Holder	1
FE-019-40	Fuse (15-amp)	1
00-426635-00001	Element (208V)	1
00-426635-00002	Element (240V)	1
00-426635-00003	Element (480V)	1
00-821875-00002	Relay (SST) (50-amp)	1
00-920883-00003	Temperature Probe Computer	1
00-424846-00001	Computer Controller (Watlow)	1
00-358516-00002	Blower Motor (2-speed) (1/3 HP)	1
00-358628-00001	ON/OFF Cool Down Switch Computer	1
00-357036-00002	Oven Lamp Assy.	1
00-411506-00003	KX Thermostat (WKE, WKEX)	1
00-497585-00001	Strike Plate (New Style) (Mounted on "C" Channel).....	2
00-423847-00001	Door Strike (Old Style) (Mounted on Doors)	1
00-497586-00001	Roller Latch (New Style) (Mounted on Doors).....	2
00-347545-00001	Roller Latch (Old Style) (Mounted on "C" Channel)	1